

V18050 Alarm Clock Instructions



We value each and every one of our customers and promise to provide a **lifetime warranty** service. Simply visit the following link to activate the lifetime warranty service.

www.jall-us.com

Missing cable, incorrect color or any other problems, please contact us:

ThreeDucksDirect@outlook.com

Structure

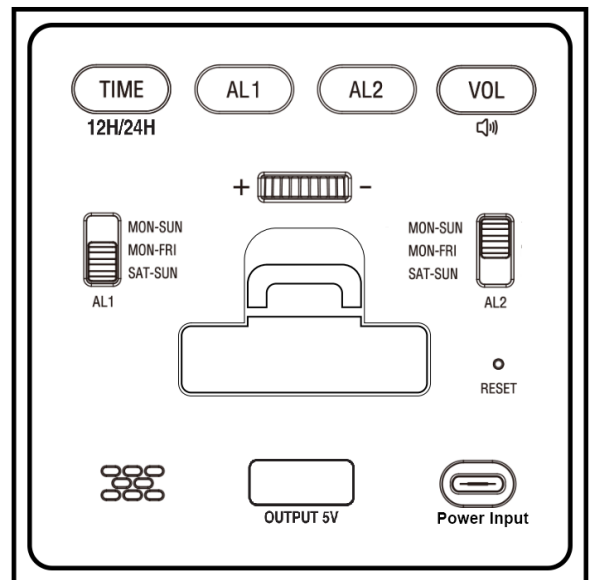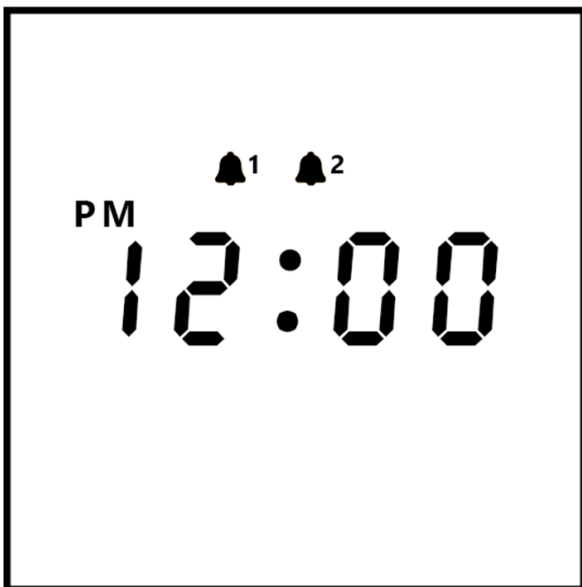

1. Package Includes:




- 1 x Alarm Clock
- 1 x User Manual.
- 1 x USB Type C Cable

2. Product Features:



- Input Voltage: AC110v-240V, 50/60HZ.
- Output Voltage: DC5V / 500MA-1000MA

3. Setting:


3.1 Operating Instructions:
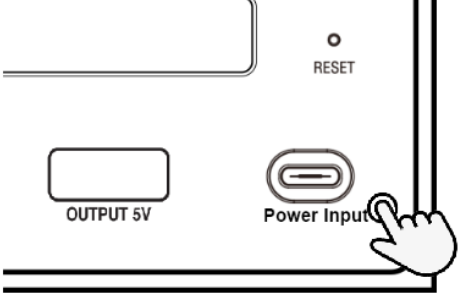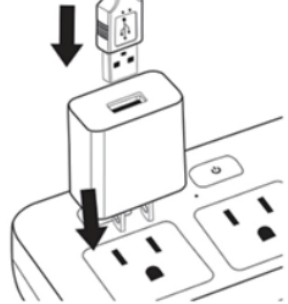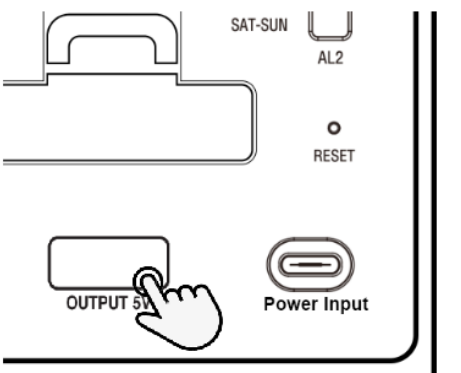
<p>①</p>  <p>RESET</p> <p>OUTPUT 5V</p> <p>Power Input</p> <p>Please connect the type-c end of the power cord to the power input of the alarm clock</p>	<p>②</p>  <p>Connect USB-A end to any unused 5V 1A or 5V 2A power adapter at home.</p>
<p>③</p>  <p>SAT-SUN</p> <p>AL2</p> <p>RESET</p> <p>OUTPUT 5V</p> <p>Power Input</p>	<p>④</p> <p>The back of the alarm clock has a USB output port (5V 1A) which allows you to charge Android or Apple system smart phone in the same time.</p>

3.2 Time Setting:

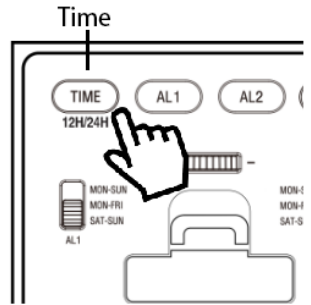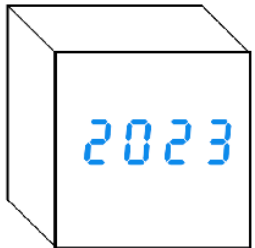
<p>①</p>  <p>Time</p> <p>TIME</p> <p>AL1</p> <p>AL2</p> <p>12H/24H</p> <p>MON-SUN</p> <p>MON-FRI</p> <p>SAT-SUN</p> <p>AL1</p> <p>MON-F</p> <p>MON-FRI</p> <p>SAT-S</p> <p>HOLD for 3 secs to enter Time Setting Menu</p>	<p>②</p>  <p>2023</p> <p>Turn scroll wheel " + [] - " to select correct "Year" value Press "TIME" to confirm and next</p>
--	---

③

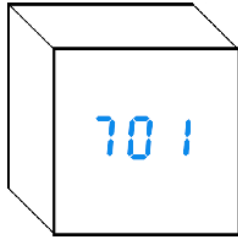

Select correct "Month" value and "Date" value.
Press "TIME" to confirm and next (e.g. July,1)


④

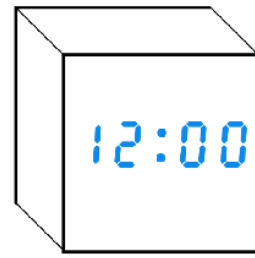

Turn scroll wheel "+ [|||||] -" to select correct "TIME" value
Press "TIME" to confirm and next


3.3 Standard Time Or Military Time (12H/24H):

①

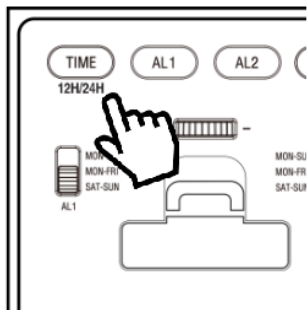


Press the "TIME" button once to switch between 12/24 hour format.

②

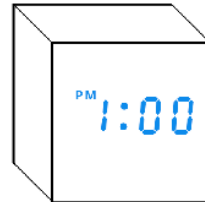


Standard Time

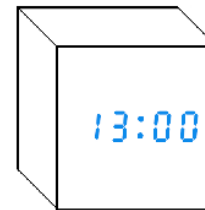

Military Time


3.4 Alarm Setting:

①

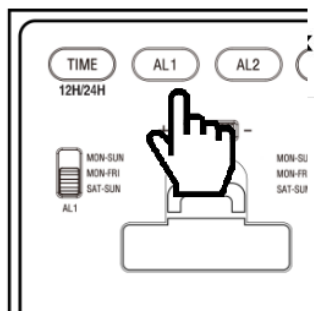


Press the "Alarm1" button once to turn the Alarm1 ON or OFF

②

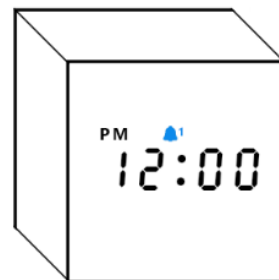


Alarm 1 is on when the indicator light is lit.

③

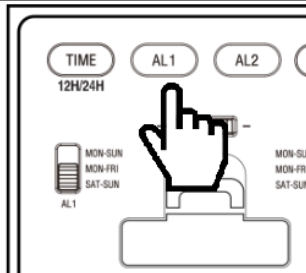


Hold the 'Alarm1' button.
to access the settings for Alarm1,
(The same applies for setting up Alarm 2)

④

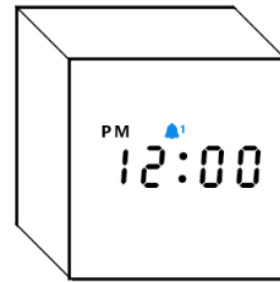


Flashing light for Alarm 1 indicates
success in entering its settings mode.

⑤

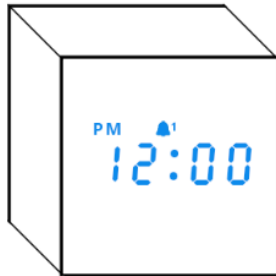

Turn scroll wheel "+ [|||||] - " to change
"Alarm Time" of A1.
Press "Alarm 1" to confirm and next.


⑥

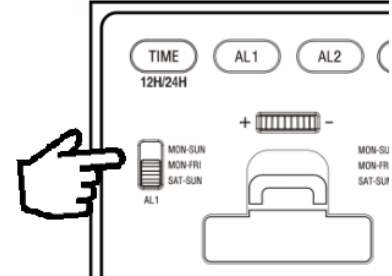

Select Alarm 1 mode:
MON-SUN(1-7) - Rings every day
MON-FRI(1-5) - Rings on working days only
SAT-SUN(6-7) - Rings on weekend only.

3.5 Brightness Setting:

①


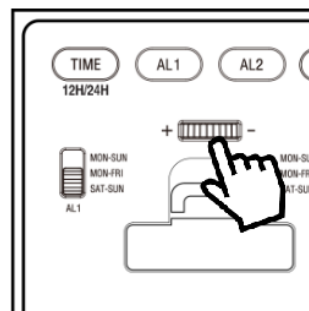


**Turn scroll wheel to adjust
brightness.**

② 6 Brightness levels

L6	100%
L5	75%
L4	50%
L3	25%
L2	10%
L1	2%



3.6 Alarm Volume Setting:
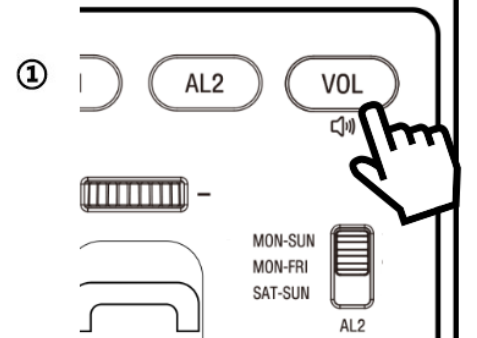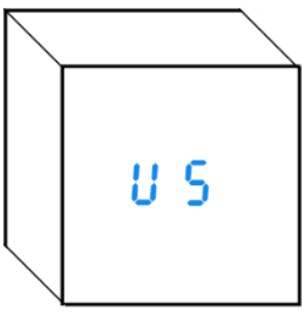
<p>①</p>  <p>Press the "VOL" button to adjust volume of the alarm.</p>	<p>②</p>  <p>5 levels to choose from: V1-V5</p>
---	---

3.7 Snooze Setting:

- ① When the alarm goes off, press any button once. The corresponding alarm indicator light will flash, giving you an extra 9 minutes of snooze time.
Notice: The snooze function will automatically shut off after 4 consecutive uses.
- ② To turn off the snooze feature, simply press any button on the back twice. This will stop the flashing of the alarm indicator light. Alarm will go off on the next day.

3.8 Reset Setting:
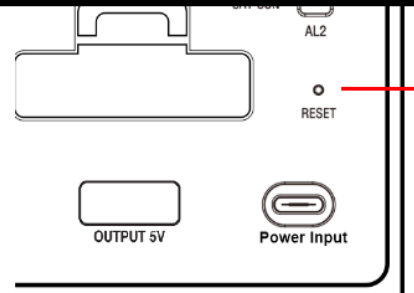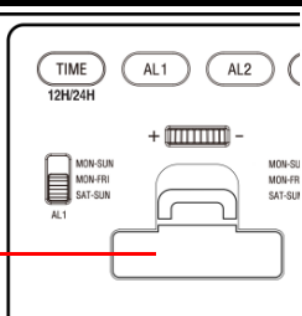
<p>①</p>  <p>Use a needle or little stick to push the "RESET" hole to reset all settings.</p>	<p>②</p>  <p>CR2032 is only used for memorizing setting, it will still keep the time even if the clock isn't plugged in.</p>
--	--

4. Trouble Shooting:

- 1) Missing power cord, or instructions, please contact us on Amazon or by email for a new replacement.
- 2) To exit setting mode, stop pressing for 5 secs and it will return to time display automatically.
- 3) If you find your alarm clock cannot be restored to the current time after a power outage, it may be because the CR2032 battery on the back of the clock is depleted. Please try replacing the battery.

Notice: The CR2032 is only used to store the alarm clock's settings and cannot be used to power the clock separately. This means that the screen will not light up if the alarm clock is used without being plugged in.